



## How to reset the Refrigerator Ice Maker

### Warning:

- Do not reset your ice maker more than once every 24 hours. Doing so may cause a service condition where the ice bucket and ice maker are frozen over with ice.
- Only reset the ice maker if you are experiencing no or low ice production.
- Make sure your ice maker is not turned off.

To reset the ice maker, follow these steps:

1. Open the left side refrigerator door and locate the ice bucket in the upper left hand corner of the refrigerator compartment.
2. Grasp the release latch on the right side of the ice bucket, squeeze, and pull the bucket out.



**Note:** Support the ice bucket from below with your free hand

3. Locate the rubber button on the right side of the ice maker, just past the front cover.



4. Press and hold the button until you hear a chime, then release the button.

**Important:**

- If you do not hear a chime press and hold the button for a full 10 seconds.
- You will need to apply some pressure to the button in order to begin the reset process.

5. Replace the Ice Bucket, close the refrigerator door; and then wait 24 hours for the full results.

**Important:**

- Your ice maker will produce approximately 2 trays of ice every 3 hours.
- Do not open and close the refrigerator door unnecessarily during this period. Opening and closing the door will extend the ice making process.